

# Pinaco Fire Alarm

# Manual Call Point

**Pinaco** Range of Addressable Manual Call Points are provided to manually trigger off the Fire Alarm. They are constructed in red ABS plastic housing, and are usually installed in areas like corridors and exit staircases. Addressable Manual Call Points are individually soft-addressed coded, alarm latching and with LED alarm indication.

Every unit is provided with a 'Key' to facilitate the Resetting of the unit during routine inspection or servicing.

Compatible with our range of Addressable Fire Alarm Panels.

## Features :-

- ❖ Complies to the latest EN 54-11 : 2000 Standard
- ❖ LPCB Approved
- ❖ Non-breaking resettable 'Glass' via special key
- ❖ LED light provided to indicate activation
- ❖ Plug-in type of Termination for ease of Installation
- ❖ Optional Transparent Flip Cover available



Plug-in Type Termination for ease of Installation



Optional Flip Cover for added protection against accidental activation



## Technical Specification :-

Operating Volatage	:	Loop 24V
Initiating Mode	:	By Pressing 'Glass' Manually
Standby Current	:	≤ 0.6mA
Alarm Current	:	≤ 1.8mA
Ingress Protection	:	IP43
Operating Temp.	:	-10°C to +55°C
Relative Humidity	:	95%, non condensing
Dimension (LxWxH)	:	87.1 x 87.1 x 58mm (with back box) 87.1 x 87.1 x 23mm (without back box)

- 1) Manual Call Point in its normal condition.
- 2) To activate, press the 'Breakglass' and it will snapped backwards.
- 3) A yellow indicator will spring upwards to indicate that the 'Breakglass' is activated.
- 4) To reset, insert a special key at the bottom of the Manual Call Point.
- 5) Twist the key and the Manual Call Point will be reinstated / reset to its normal condition.